

Turning on gas for the hob

Before starting turning on the gas check that the gas emergency stop (by the outside door) has not been triggered, and reset it if necessary.

1. Touch Fan Touch Screen (nuaire box above yellow gas switch) to start process
2. Touch Op Mode on Fan Touch Screen and change to **Manual** (use green arrows to change)
3. If necessary touch Function on Fan Touch Screen and change to **Ventilation** (use green arrows)
4. Touch Speed on Fan Touch Screen and change to **5** (use green arrows to change)
5. Using key from hook above yellow gas switch turn gas switch to **On** (three green lights should show). Leave key in switch.
6. Turn **On** electricity for hob ignition. (Switch on wall to left of double cooker switch on left of hob)
7. Check that a gas ring will ignite.

Closing down gas after use for the hob

1. Check that all rings are switched off
2. Turn **Off** electricity to hob ignition
3. Turn **Off** yellow gas switch and hang key back on hook
4. Touch Speed on Fan Touch Screen and change to **3** (use green arrows to change)
5. Touch Op Mode on Fan Touch Screen and change to **Off** (use green arrows to change)